


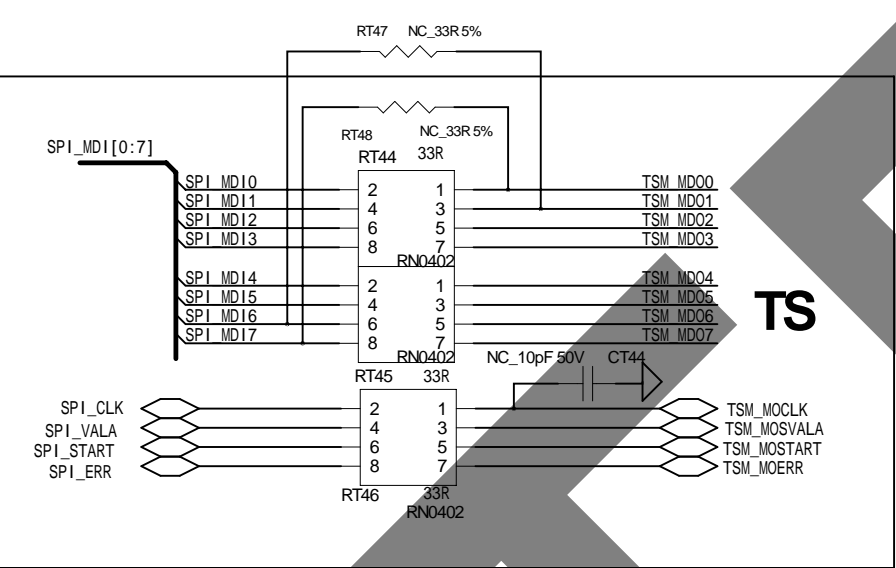
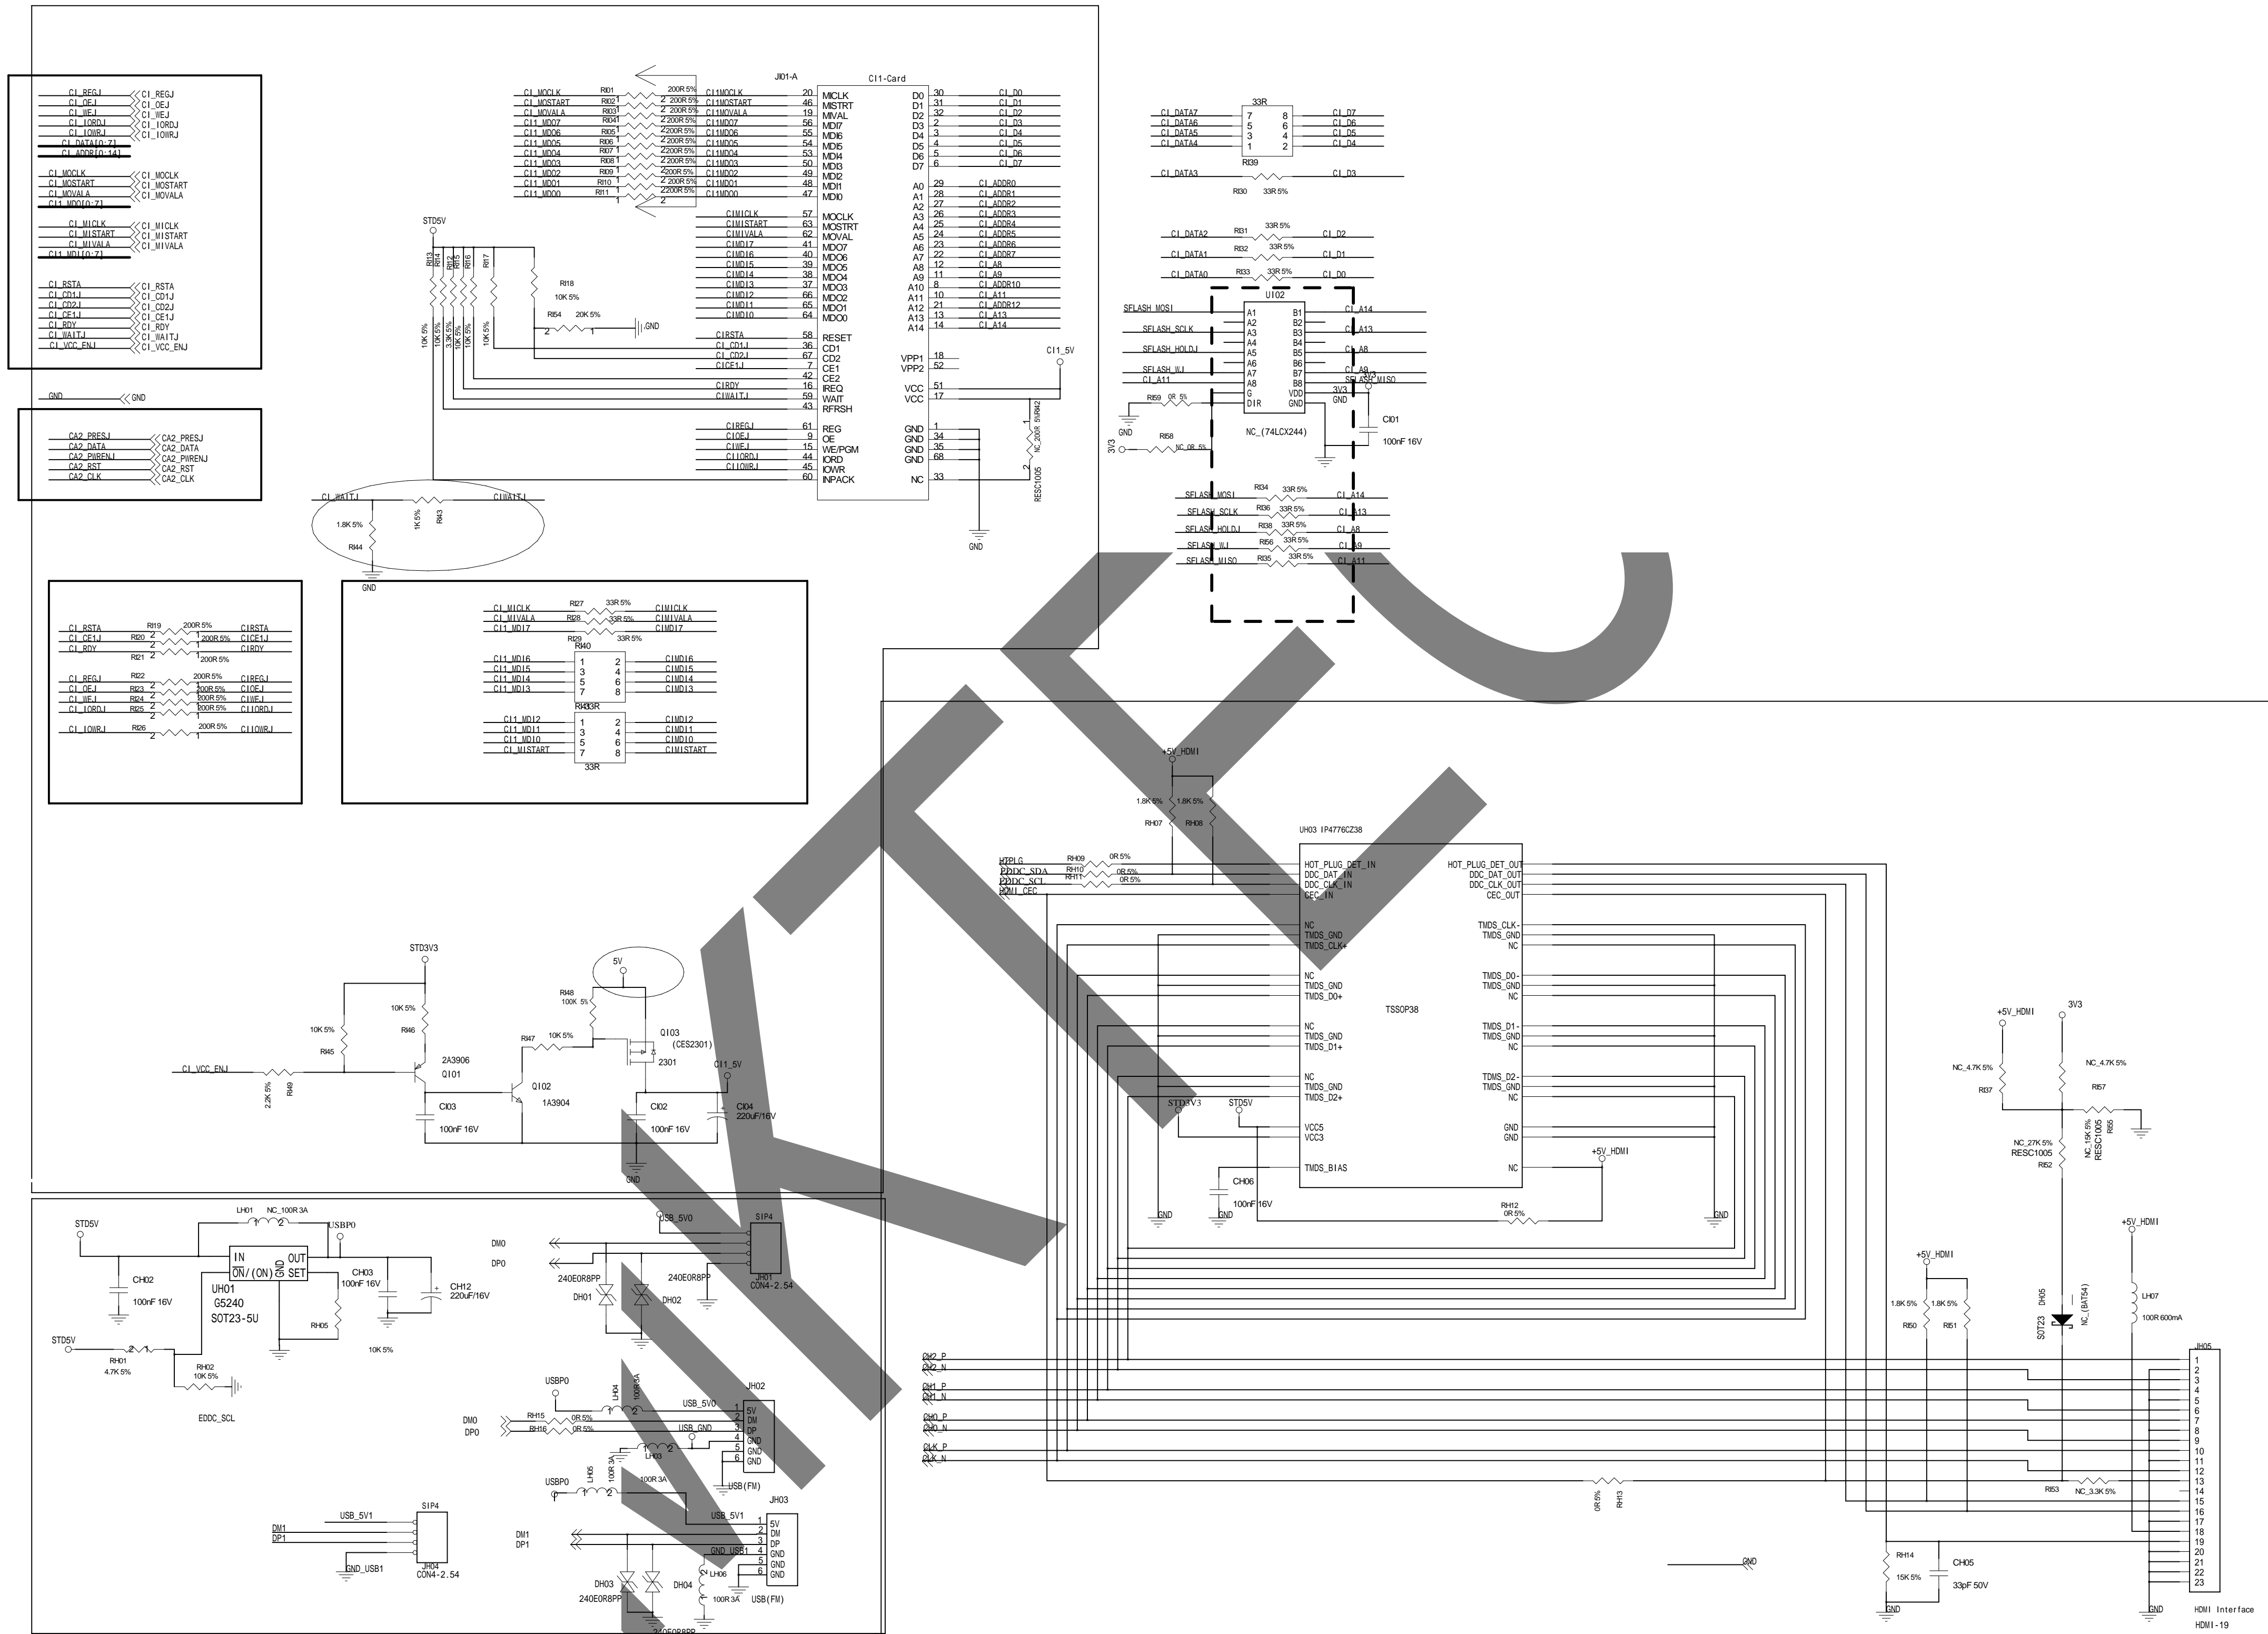


KSZ8041: ADD:LL01,CL16,RL23


KSZ8041: CHANGE:CL21 0R,CL04 6.49K,RL10 100NF,CL14 NC,LL03 NC,RL09 NC,

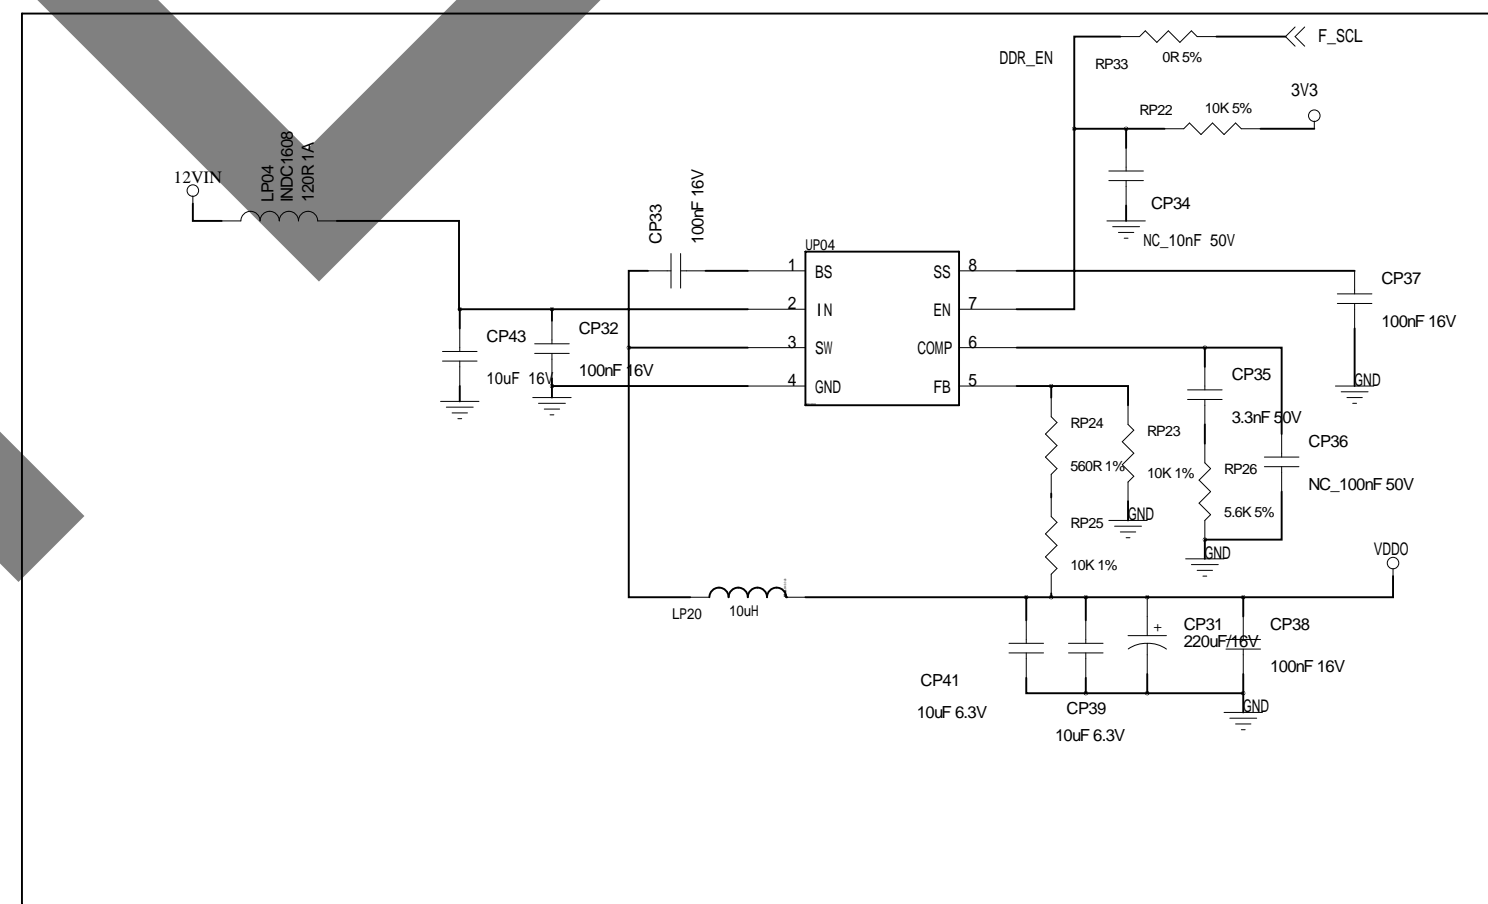

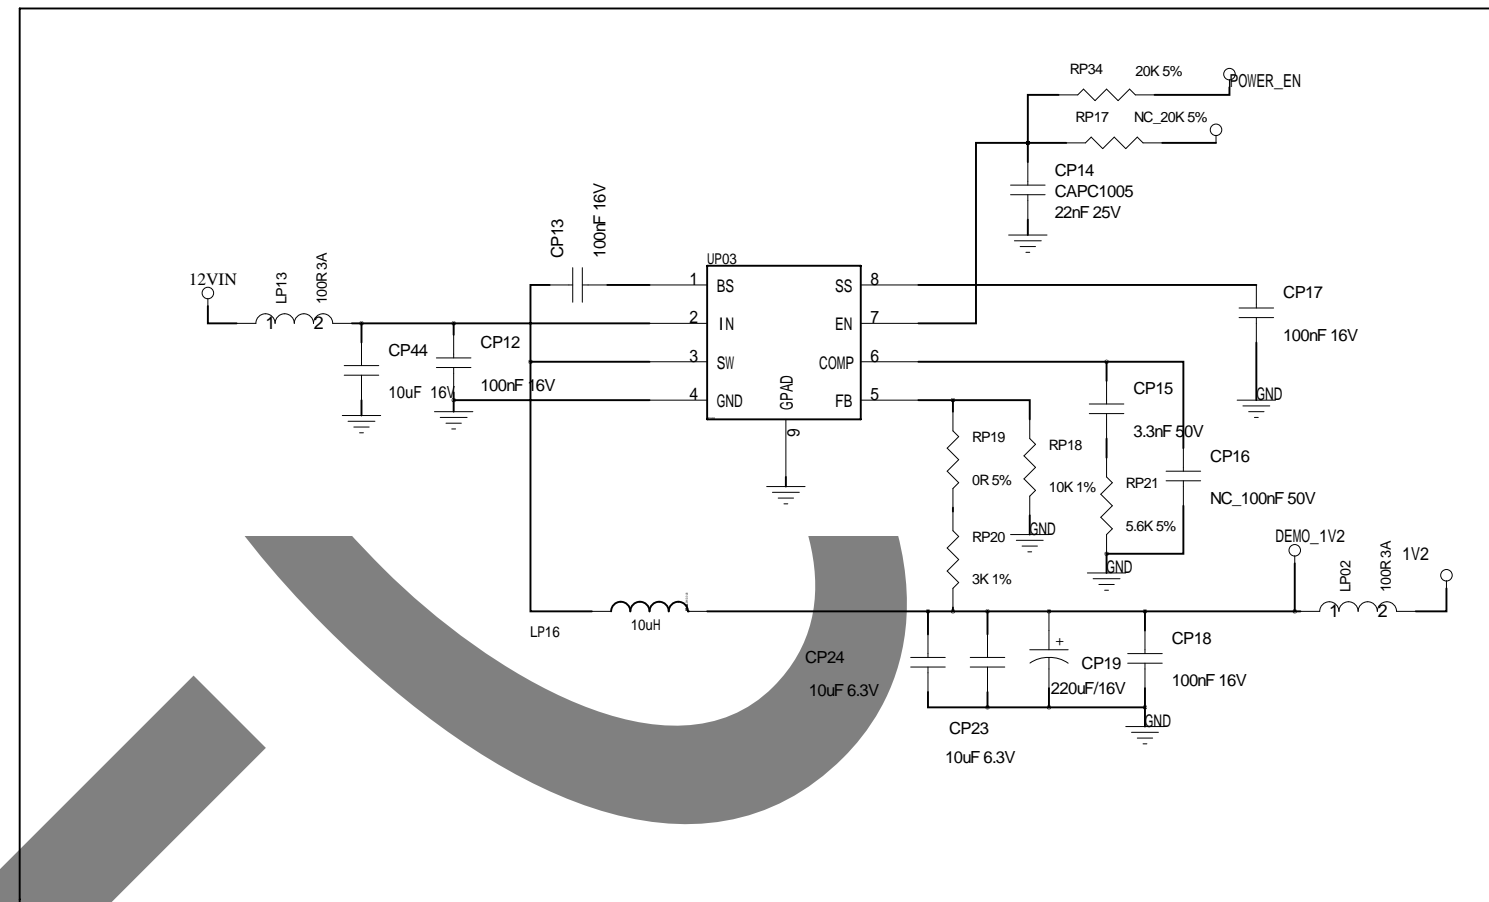


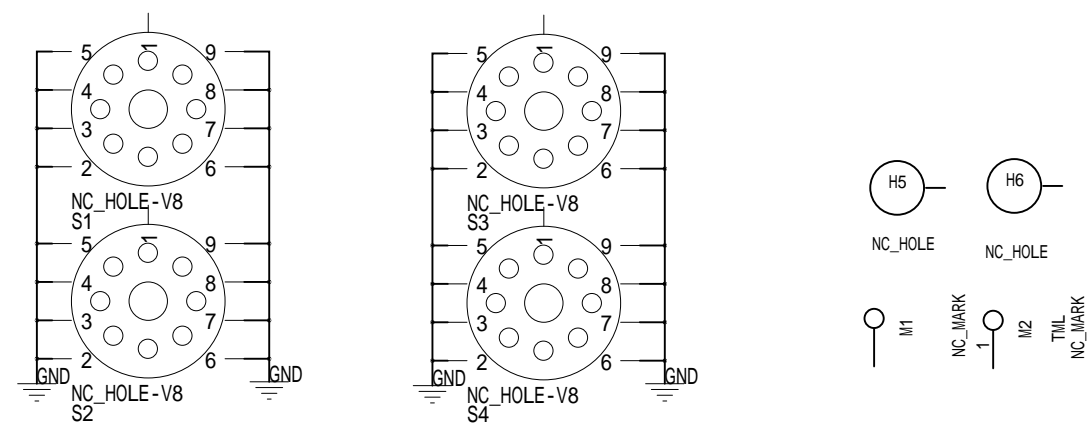


## VIDEO

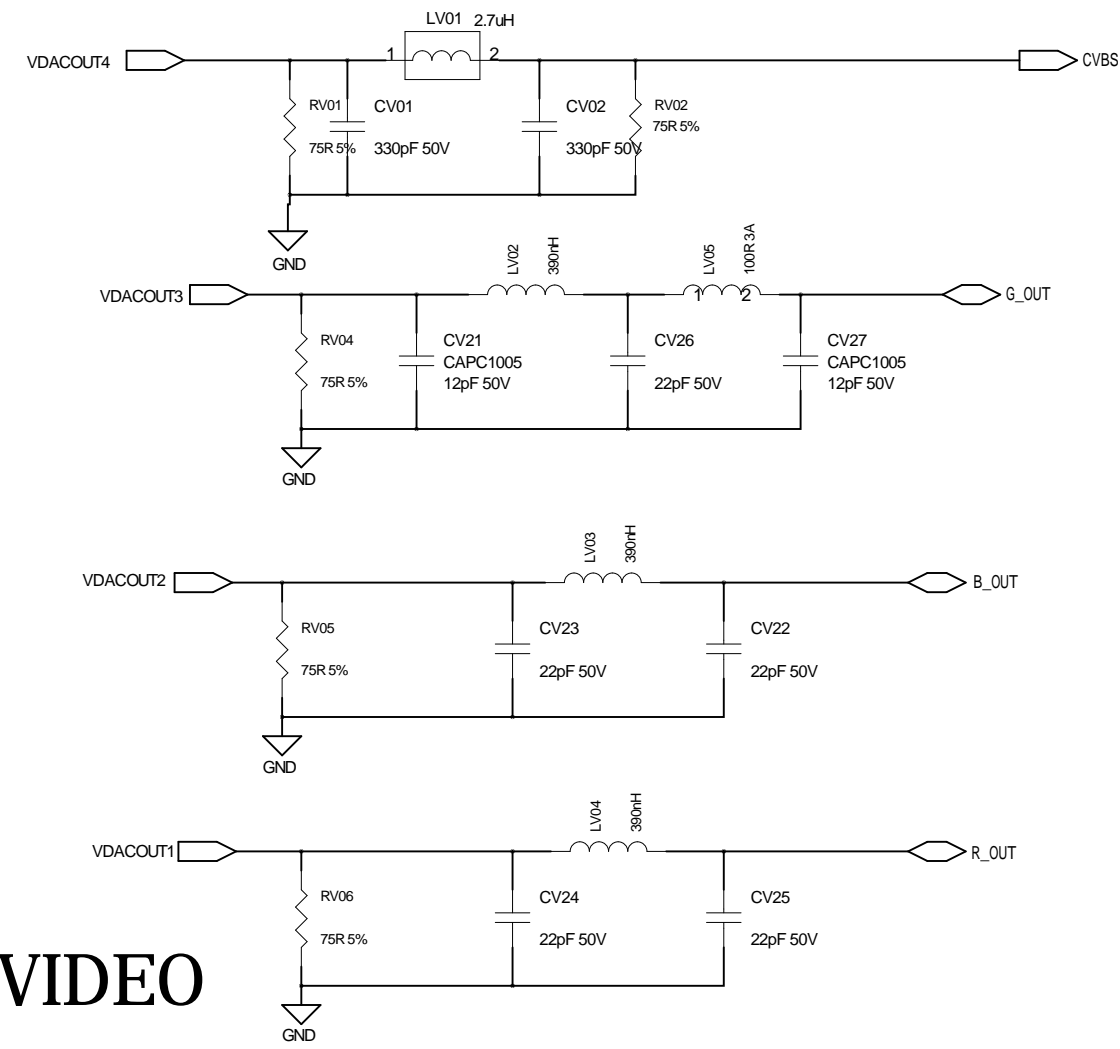


## TV SCART

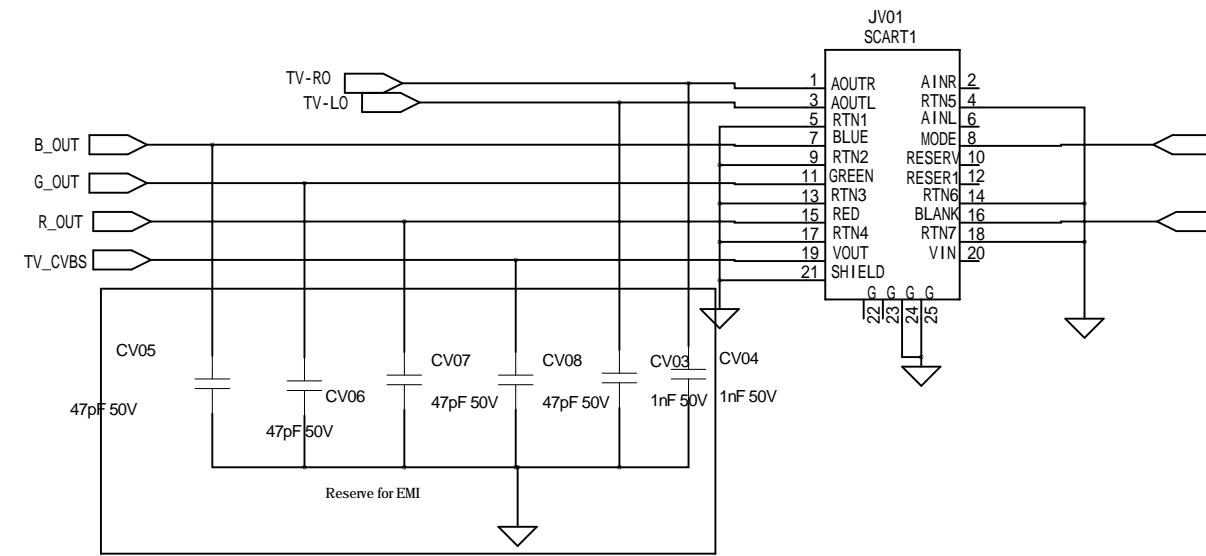

## AUDIO

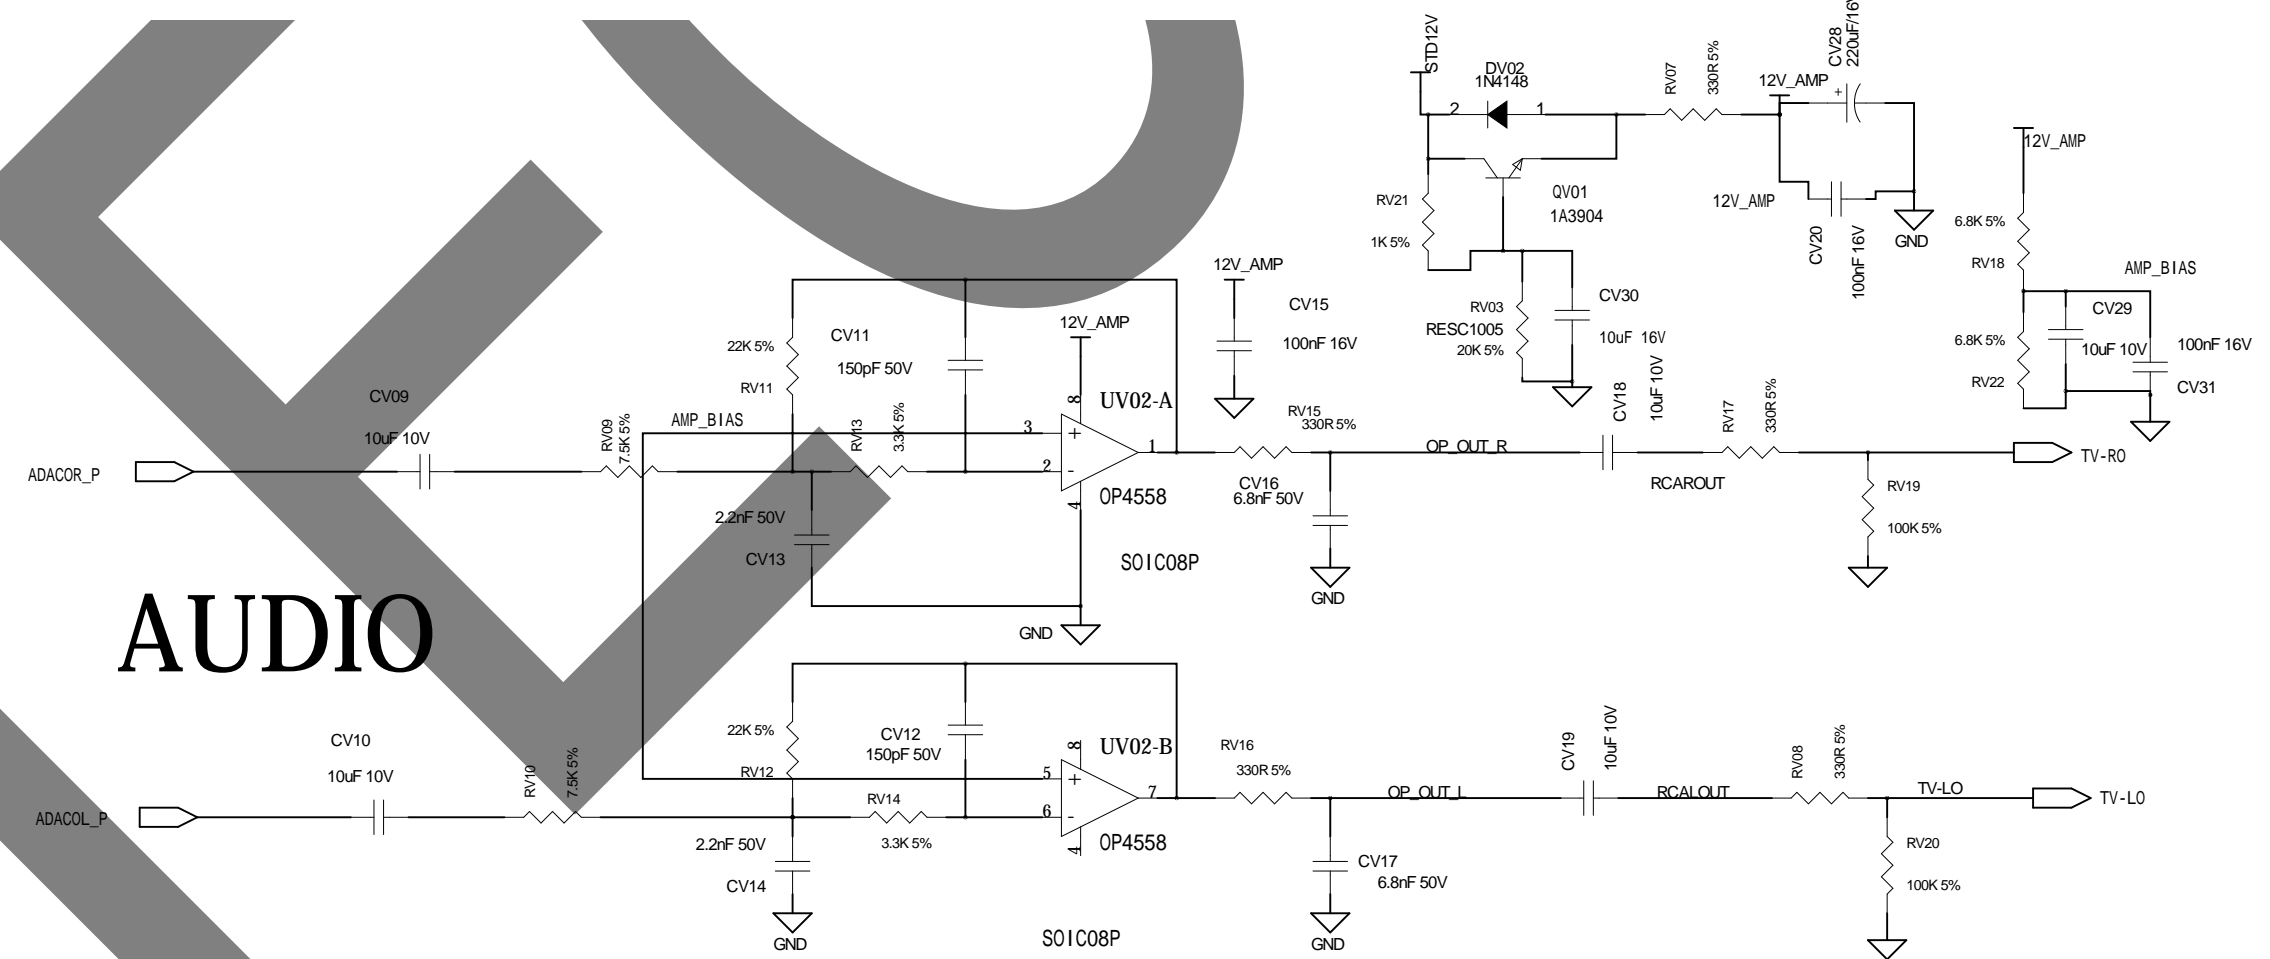


## SPDIF

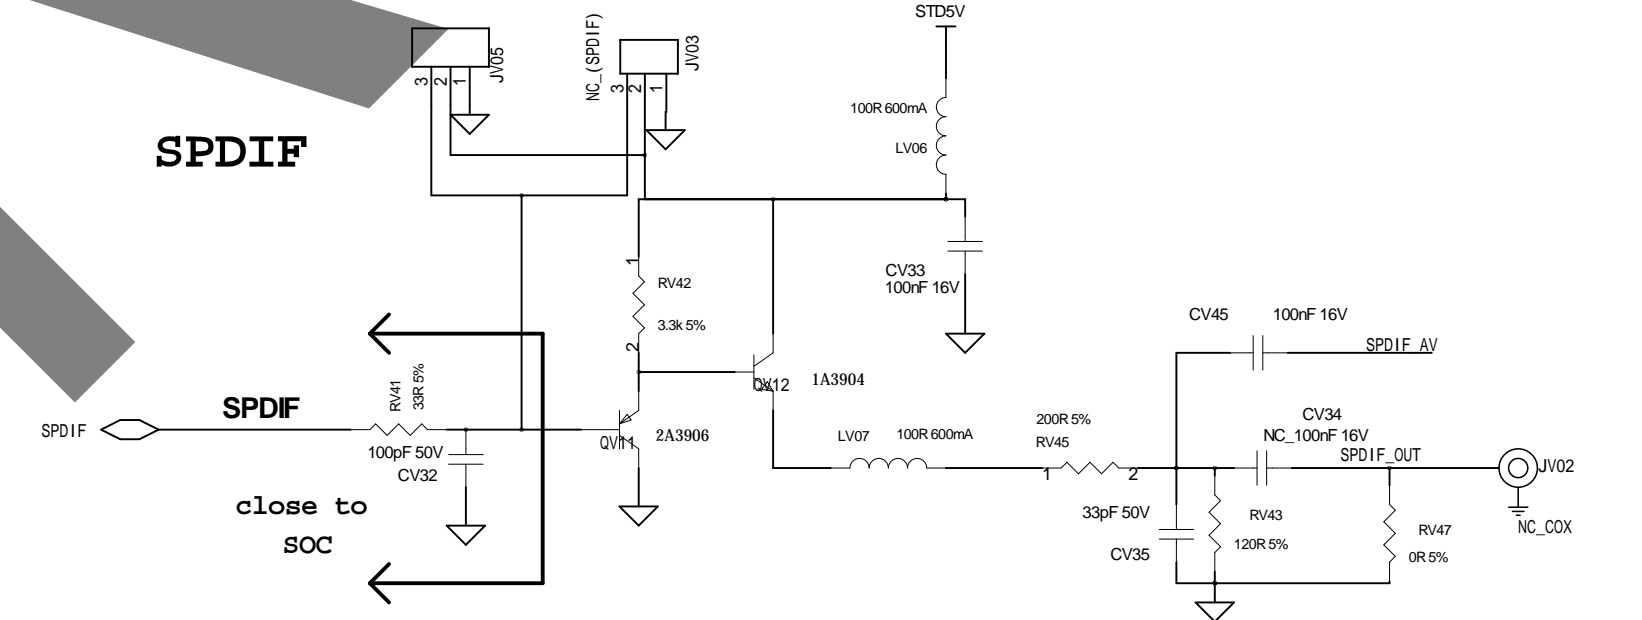


16:9 : GPI07 Set 1 ; 4:3 :GPI07 Set 0

STANDBY : GPI08 Set: 0

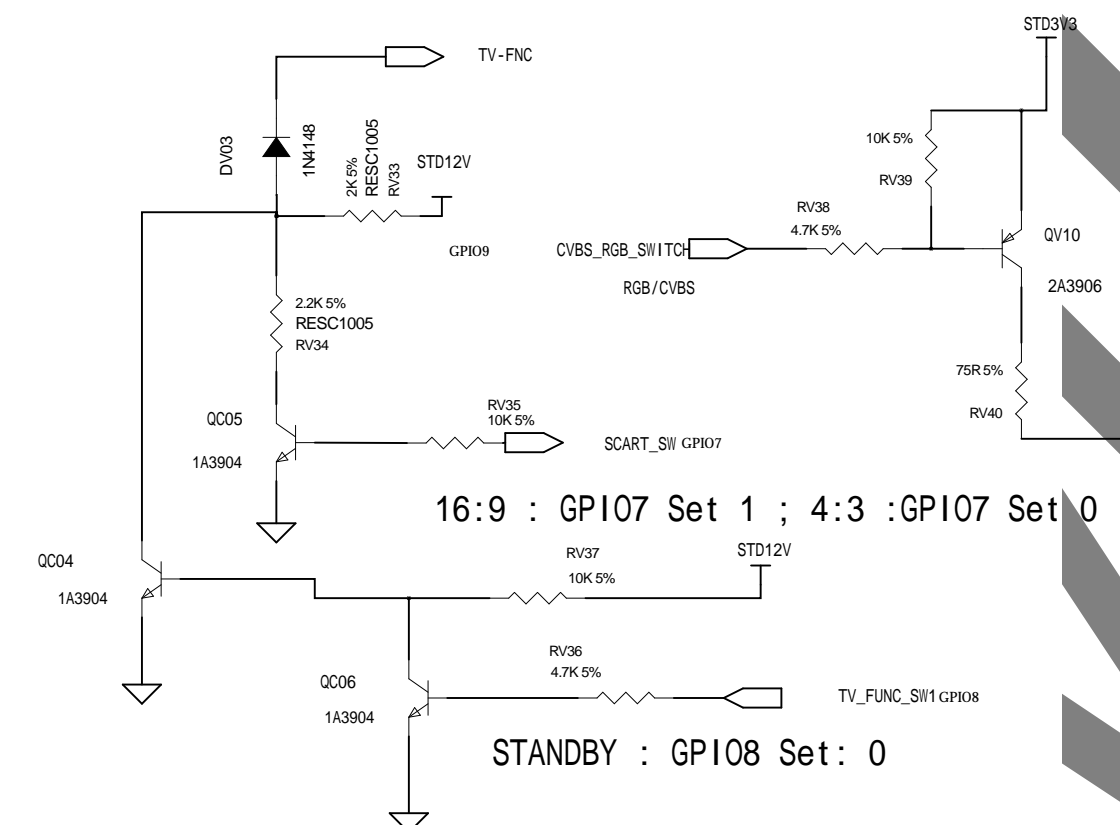


LED1\_C作为RCA的右声道时，不兼

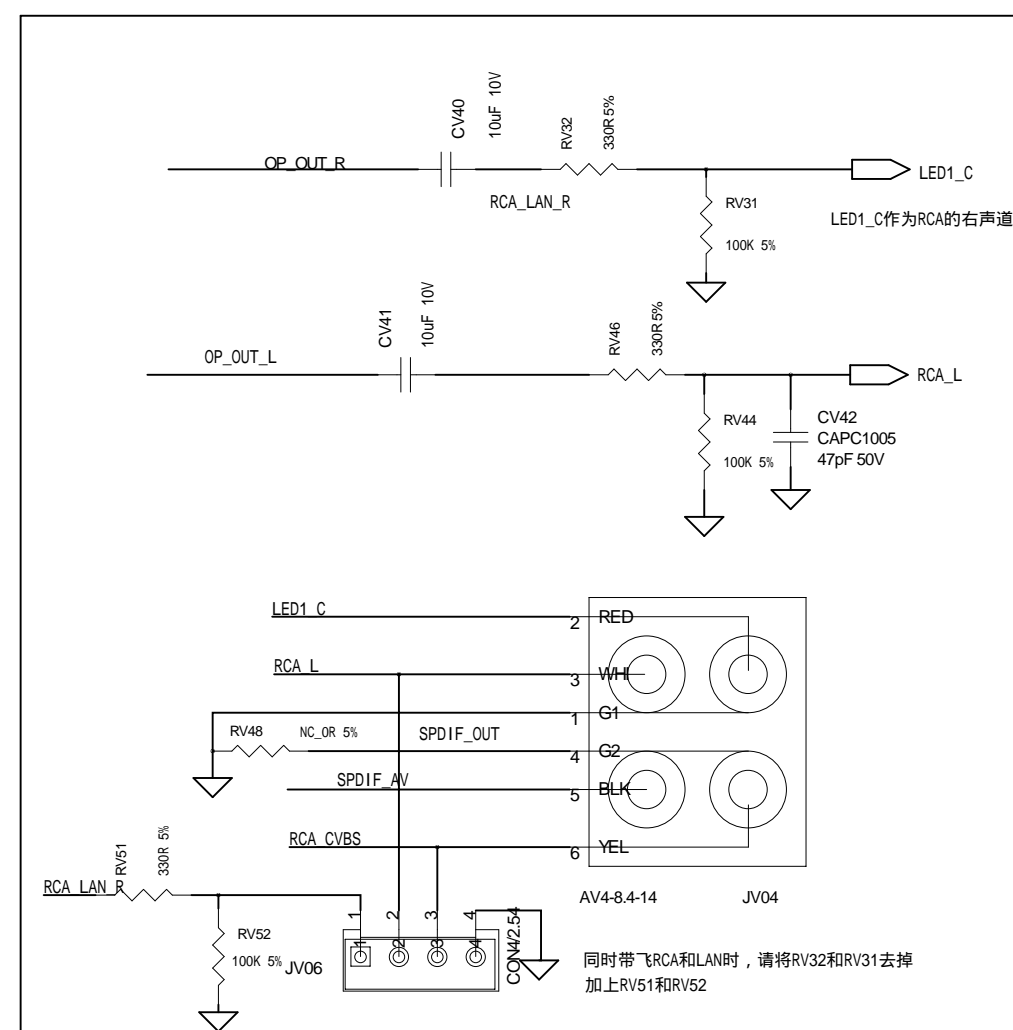


同时带飞RCA和LAN时，请将RV32和RV31去掉加上RV51和RV52

VFD or LED panel interface

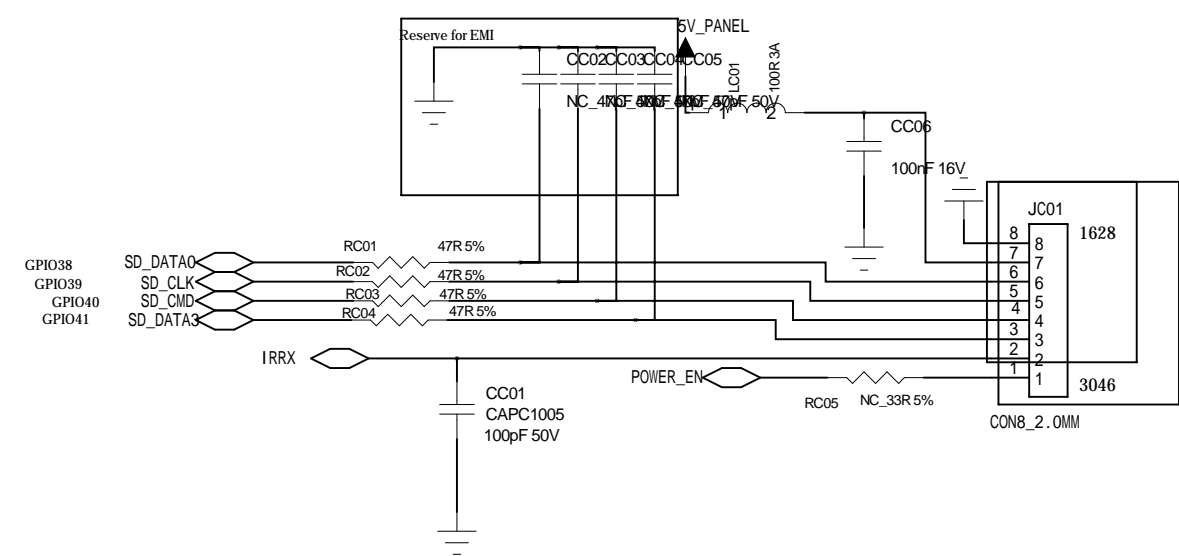


RS232

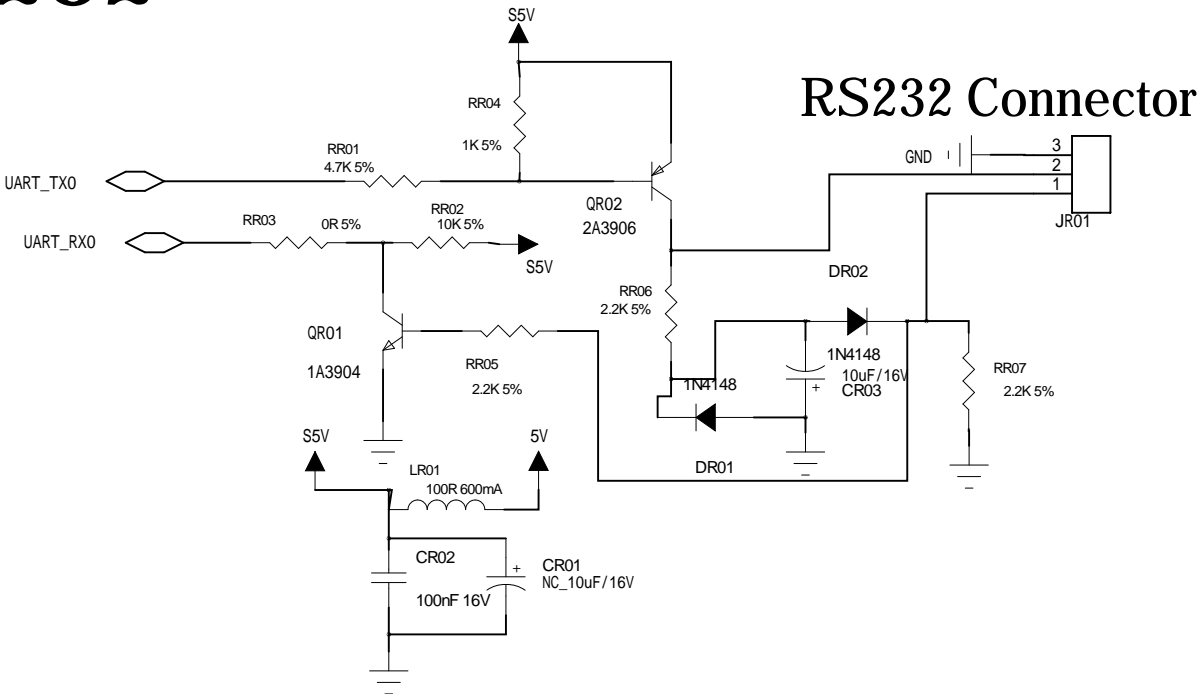

SMART CARD

	R890,R895	R891,R894
If pin 9 and 10 is open when no card is inserted (NORMAL OPEN)	Assemble	Remove
If pin 9 and 10 is short when no card is inserted (NORMAL CLOSE)	Remove	Assemble

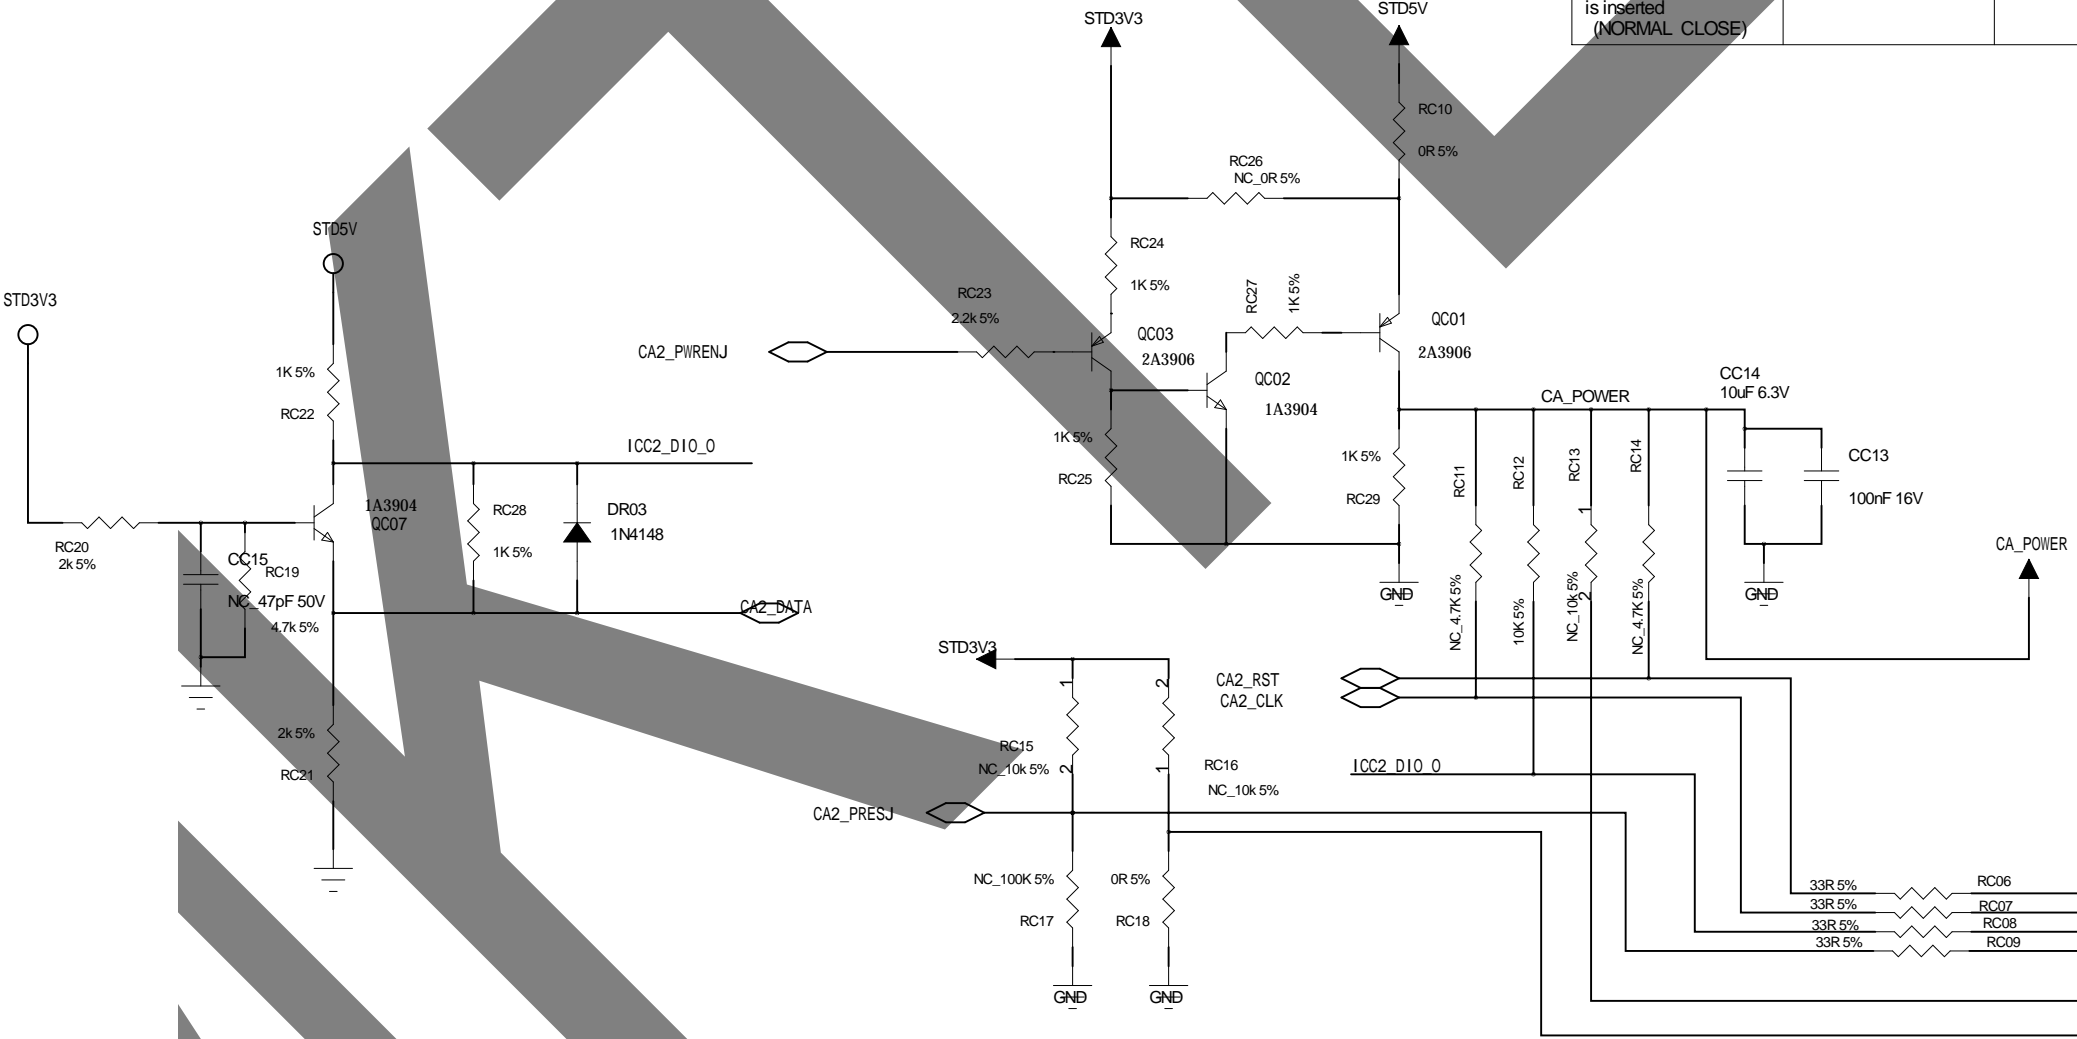

CA interface

